


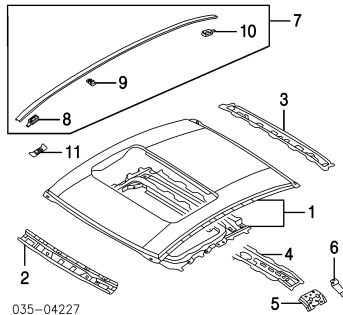


035-04227

- 1 Panel, Roof
w/Sunroof F1Y3-70-60X
w/o Sunroof F1Y1-70-60X
- 2 Panel, Front Header F151-70-641
- 3 Panel, Rear Header F151-70-700
- 4 Reinf, Roof F151-70-660
- 5 Gusset, Roof Panel
w/Sunroof R F153-70-635
w/o Sunroof R F153-71-635
L F151-70-635
L F151-71-635
- 6 Brkt, Sunroof R F153-70-623
L F153-71-623
- 7 Moulding Assy, Roof
Brilliant Black (Code A3F) R F151-50-9H0-PZ
Lightning Yellow (Code A4J) L F151-50-9L0-PZ
Nordic Green (Code 27C) R F151-50-9H0-93
Sunlight Silver (Code 22V) L F151-50-9L0-93
Titanium Gray (Code 29Y) R F151-50-9H0-97
Velocity Red (Code 27A) L F151-50-9L0-97
Winning Blue (Code 27B) R F151-50-9H0B-67
L F151-50-9L0C-67
R F151-50-9H0C-67
L F151-50-9L0C-67
- 8 Cap, Front Moulding
Brilliant Black (Code A3F) R F151-50-9H1-PZ
Lightning Yellow (Code A4J) L F151-50-9L1-PZ
Nordic Green (Code 27C) R F151-50-9H1-93
Sunlight Silver (Code 22V) L F151-50-9L1-93
Titanium Gray (Code 29Y) R F151-50-9H1A-67
Velocity Red (Code 27A) L F151-50-9L1A-67
Winning Blue (Code 27B) R F151-50-9H1-94
L F151-50-9L1-94
- 9 Protector, Moulding (2/Side) R/L GJ6A-50-9H9
- 10 Cap, Rear Moulding
Brilliant Black (Code A3F) R F151-50-9H2-PZ
Lightning Yellow (Code A4J) L F151-50-9L2-PZ
Nordic Green (Code 27C) R F151-50-9H2-93
Sunlight Silver (Code 22V) L F151-50-9L2-93
Titanium Gray (Code 29Y) R F151-50-9H2A-67
Velocity Red (Code 27A) L F151-50-9L2A-67
Winning Blue (Code 27B) R F151-50-9H2-66
L F151-50-9L2-66
R F151-50-9H2-87
L F151-50-9L2-87
R F151-50-9H2-94
L F151-50-9L2-94
- 11 Clip, Moulding (3/Side) R/L GJ6A-50-629

INTERIOR TRIM

Illustration Located in Next Column


- 1 Headliner
w/Sunroof FE03-68-030D-77
w/o Sunroof FE01-68-030H-77
- 2 Clip, Visor-See Windshield Section
- 3 Clip, Ctr Headliner F151-68-0C0A
- 4 Clip, Rear Headliner (3) GJ21-68-885B-03
- 5 Module, Side Curtain Air Bag-See Air Bag System Section
- 6 Pad, Front Impact R FE01-68-H10C
L FE01-68-H20C
- 7 Pad, Rear Impact R F152-68-H50C
L F152-68-H60C
- 8 Clip, Rear Pad R/L H380-68-805
- 9 Bracket, Side Trim R F151-68-DL1A
L F151-68-DL6A
- 10 Trim Assy, Side R F151-68-12XA-02

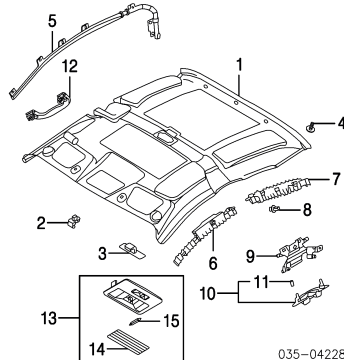

035-04228

- 11 Clip, Trim (2/Side) L F151-68-12YA-02
R/L LA10-68-D21
- 12 Handle, Assist R GJ6A-69-470B-77
- 13 Lamp Assy, Dome D350-51-310D-77
- 14 Lens, Dome Lamp D350-51-311B
- 15 Bulb, Dome Lamp 9970-05-100L

OVERHEAD CONSOLE

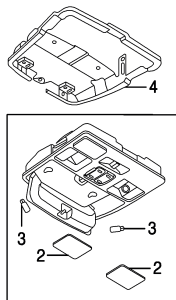


035-04229

- 1 Console Assy, Overhead
w/Sunroof GK2A-69-970B-77
w/o Sunroof GK2E-69-970-77
- 2 Lens R GJ6A-69-973
- 3 Bulb L GJ6E-69-973
- 4 Brkt, Overhead Console R/L 0000-11-0194

SUNROOF

Illustration Located in Next Column


- 1 Glass Assy, Sunroof F153-69-810
- 2 W/Strip, Glass F153-69-825
- 3 Welt, Sunroof F153-69-981-77
- 4 Rail, Drip F153-69-867
- 5 Deflector F153-69-860
- 6 Frame, Sunroof F153-69-840
- 7 Cushion, Frame F153-69-849
- 8 Link, Sunroof R F153-69-9H1
L F153-69-9H2
- 9 Plate, Set R F153-69-858
L F153-69-859
- 10 Sunshade F153-69-890-77
- 11 Stopper, Sunshade R/L F153-69-892
- 12 Bracket, Sunroof R/L F153-69-943-4
- 13 Cable, Drive R/L F153-69-912-3
- 14 Guide, Front Cable R F153-69-877
L F156-69-877
- 15 Guide, Rear Cable R/L F153-69-862-3
- 16 Drive Unit F153-69-860
- 17 Motor, Sunroof F153-69-870
- 18 Harness, Sunroof F153-69-872
- 19 Hose, Front Drain R N/A
L F153-69-920A
- 20 Grommet, Front Hose R/L G14T-69-926A
- 21 Hose, Rear Drain R F156-69-920
L F160-69-920

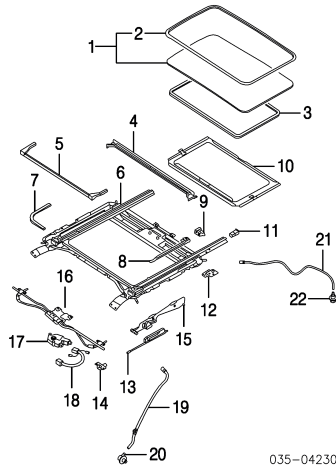

035-04230

- 22 Grommet, Rear Hose R/L LC73-61-557A

BACK WINDOW

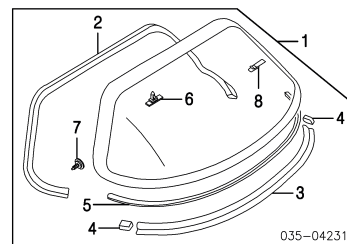


035-04231

- 1 Window Assy, Back FE01-63-930B
- 2 Moulding, Upper F151-50-611A
- 3 Moulding, Lower F151-50-614
- 4 Gasket, Joint R/L F151-50-6G6A
- 5 Weatherstrip, Lower F151-50-899
- 6 Clip, Pin Type 1 (3) D376-63-938
Type 2 F151-63-938A
- 7 Bolt, Stud R/L F151-63-939A
- 8 Terminal, Glass (3) FB01-63-959

QUARTER PANEL

SHEET METAL

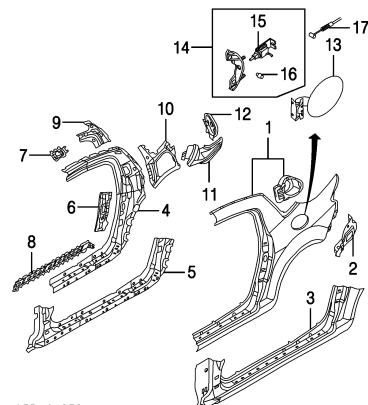

035-04232


- 1 Panel, Outer Quarter R F1Y1-70-410D
L F1Y1-71-410C

MAZDA RX-8 2004

QUARTER PANEL Cont'd


SHEET METAL Cont'd

- | | |
|--|----------------------------------|
| 2 Panel, Lower Quarter | R F151-70-4A1
L F151-71-4A1 |
| 3 Panel, Outer Side Sill-See Rocker/Pillars/Floor Section | |
| 4 Reinf, Rear Pillar | R F1Y1-70-12YA
L F1Y1-71-12YA |
| 5 Panel, Inner Side Sill-See Rocker/Pillars/Floor Section | |
| 6 Reinf, Door Hinge | R F151-70-381
L F151-70-381 |
| 7 Reinf, Upper Striker | R F151-70-390
L F151-71-390 |
| 8 Gusset, Sill-See Rocker/Pillars/Floor Section | |
| 9 Reinf, Roof Rail | R F151-70-252
L F151-71-252 |
| 10 Reinf, Upr Quarter Panel | R F151-70-122
L F151-71-122 |
| 11 Rail, Rear Drain | R F151-70-441
L F151-71-441 |
| 12 Plate, Corner | R F151-70-480C
L F151-71-481D |
| 13 Door, Fuel | L F151-42-410B |
| 14 Latch Assy, Fuel Door | L F151-56-83XD |
| 15 Latch, Fuel Door | L EAO1-56-890D |
| 16 Stopper, Fuel Door | (2) O187-70-491 |
| 17 Cable, Fuel Door Release-See Rocker/Pillars/Floor Section | |

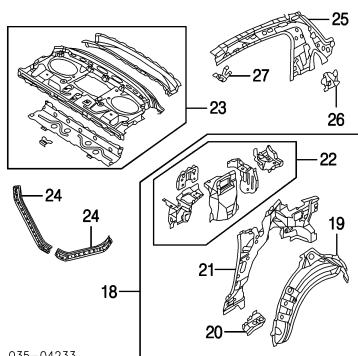

- | | |
|-------------------------------|----------------------------------|
| 18 Panel Assy, Inner Quarter | R F151-70-100F
L F151-71-100F |
| 19 Wheelhouse, Outer | R F151-70-115
L F151-71-115 |
| 20 Reinf, Sill | R F151-70-272
L F151-71-272 |
| 21 Wheelhouse, Inner | R F151-70-110C
L F151-71-110F |
| 22 Support, Package Tray | R F151-70-180B
L F151-71-180B |
| 23 Tray, Package | F151-70-500 |
| 24 Brace, Package Tray | R/L F151-56-55YB |
| 25 Panel, Upr Inner Quarter | R F1Y1-70-05Y
L F1Y1-71-05Y |
| 26 Reinf, Inner Quarter Panel | R F151-70-791A
L F151-71-791A |
| 27 Brkt, Rear Assist Handle | R FE01-70-192 |


EXTERIOR TRIM

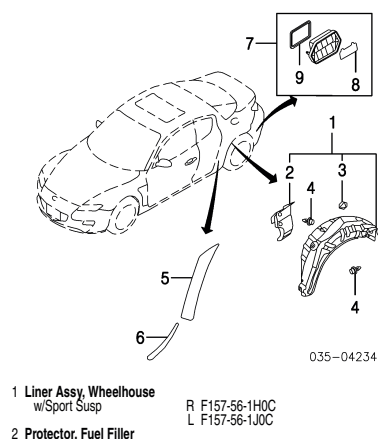


- | | |
|---------------------------------------|----------------------------------|
| 1 Liner Assy, Wheelhouse w/Sport Susp | R F157-56-1H0C
L F157-56-1J0C |
| 2 Protector, Fuel Filler | |

- | | |
|--------------------------------|----------------------------------|
| Std Susp-See Fuel Tank Section | |
| 3 Grommet | R/L F157-42-298
C100-51-SJ3A |
| 4 Clip, Liner | R/L BC1D-56-145 |
| 5 Guard, Upper Stone | R FE01-50-4P1A
L FE01-50-4R1A |
| 6 Guard, Lower Stone | R FE01-50-4P2C
L FE01-50-4R2C |
| 7 Chamber Assy, Extractor | R/D350-51-920 |
| 8 Valve, Extractor (2/Side) | R/D350-51-923 |
| 9 Gasket, Chamber | R/L E016-51-922 |

INTERIOR TRIM

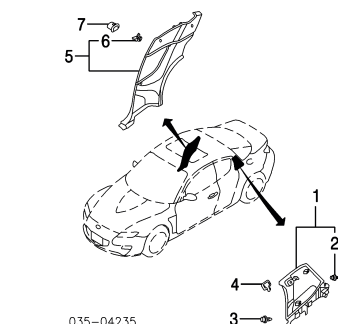


- | | |
|--------------------------------|--|
| 1 Panel Assy, Upper Trim | R F152-68-250C-77
L F152-68-260C-77 |
| 2 Clip, Trim Panel | R/L LA10-68-D21
GE4T-68-865A |
| 3 Fastener, Trim Panel | R/L GJ21-68-885B-02 |
| 4 Cover, Trim Panel | R F152-68-2G1A-77
L F152-68-2H1A-77 |
| 5 Panel Assy, Lower Trim | R FE01-68-58YC-02
L FE01-68-59YC-02 |
| Leather | |
| Black (Code FF3) | R FE02-68-58YC-02
L FE02-68-58YC-02 |
| Brown/Black (Code FF5) | R FE02-68-58YC-23
L FE02-68-58YC-15 |
| Red/Black (Code FF4) | R FE02-68-58YC-15
L FE02-68-58YC-15 |
| 6 Clip, Trim Panel (4/Side) | R/L GJ21-68-865 |
| 7 Grommet, Trim Panel (4/Side) | R/L E001-68-506 |

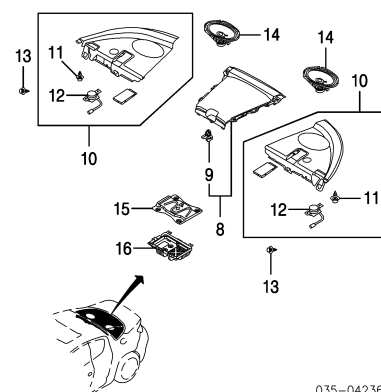

- | | |
|-----------------------------------|---------------------------------------|
| 8 Panel Assy, Inner Package Tray | F151-68-3A0A-02 |
| 9 Clip, Panel (2) | GJ12-68-865 |
| 10 Panel Assy, Outer Package Tray | |
| 6 Speaker System | R F151-68-3WX-02
L F151-68-3WY-02 |
| 9 Speaker System | R F154-68-3WX-02
L F154-68-3WY-02 |
| 11 Clip, Panel (2/Side) | R/L GJ12-68-865 |
| 12 Speaker, Tweeter | R/L F153-66-960 |
| 13 Clip, Panel | R/L B041-68-865-02
GJ21-68-885B-02 |
| 14 Speaker, Rear | |


- | | |
|---------------------|-----------------|
| 6 Speaker System | R/L F155-66-960 |
| 9 Speaker System | R/L F156-66-960 |
| 15 Brkt, Amplifier | F151-66-A21 |
| 16 Amplifier, Power | |
| 9 Speaker System | F151-66-920 |
| Cloth Seats | F153-66-920A |
| Leather Seats | |

LUGGAGE LID

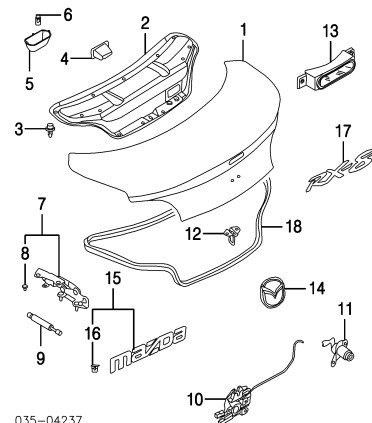

- | | |
|---|----------------------------------|
| 1 Lid, Luggage | F151-52-610B |
| 2 Trim, Luggage Lid | F151-68-8WXXD |
| 3 Clip, Trim | B040-68-865A-00 |
| 4 Bezel, Trim Panel | GJ6A-68-966-02 |
| 5 Lens, Luggage Lamp | B100-51-441 |
| 6 Bulb | 0000-11-0194 |
| 7 Hinge Assy, Lid | R F151-52-710B
L F151-52-720B |
| 8 Cushion, Hinge (2/Side) | R/L GJ6A-56-802A |
| 9 Strut, Luggage Lid | R/L F151-56-930 |
| 10 Latch, Luggage Lid | FE01-56-820B |
| 11 Cylinder, Luggage Lid Lock | FEY2-76-230 |
| w/ Theft Deterrent | FEY5-76-230 |
| w/o Theft Deterrent | |
| Section | |
| 12 Striker | F151-56-840A |
| 13 Lamp Assy, Stop-See Rear Lamps Section | |
| 14 Emblem | F152-51-731A |
| 15 Nameplate Assy | |
| "MAZDA" | F151-51-710B |
| 16 Clip, Nameplate (3) | F151-51-958 |
| Included w/Nameplate Assy | |
| 17 Nameplate (Adhesive) | F151-51-721A |
| "RX-8" | F151-56-951D |
| 18 W/Strip, Luggage Lid | |


REAR SUSPENSION

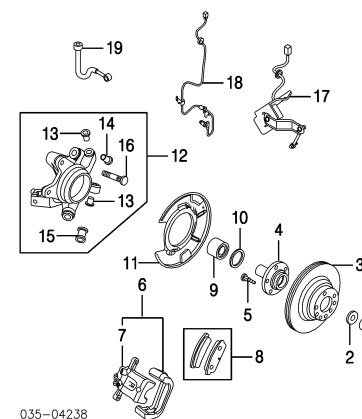

- | | |
|----------------------|------------------|
| 1 Nut, Axle | R/L LA01-33-042B |
| 2 Washer | R/L J001-26-114A |
| 3 Rotor, Brake | R/L F151-26-251 |
| 4 Hub, Axle | R/L F151-26-241A |
| 5 Stud, Lug (5/Side) | R/L B455-33-062 |


MAZDA RX-8 2004

- 6 Caliper Assy, Brake R F121-26-98Z
L F121-26-98Z
7 Caliper, Brake R F151-26-61X
L F151-26-71X
 (Included w/Brake Caliper Assy)
8 Pad Set, Brake F1Y1-26-43Z
9 Bearing, Axle R/L F151-26-151
10 Retainer, Bearing R/L GE4T-33-048
11 Shield, Splash R/L F151-26-261A
12 Knuckle Assy R F151-26-11XA
L F151-26-12XA
 Bushing, Knuckle R/L F151-33-024
13 Type 1 (2/Side) R/L F152-33-024
14 Type 2 R/L F151-28-430
15 Type 3 R/L F151-26-118
16 Bolt, Mounting R/L F151-26-118
 (Included w/Knuckle Assy)
17 Sensor, Leveling L FE03-51-22YB
 w/DSC
18 Sensor, Rear ABS-See ABS/Brakes Section
19 Hose, Brake R/L F151-43-810

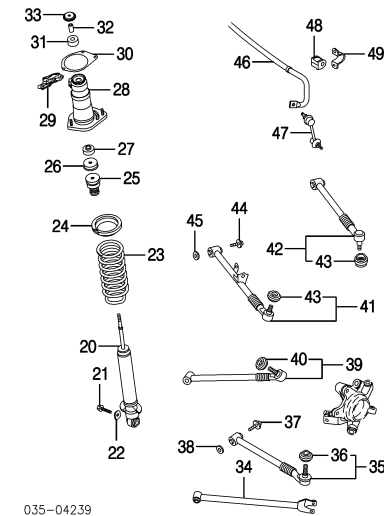

035-04239


- 20 Strut, Rear R/L F151-28-700C
Std Susp R/L F152-28-700C
Sport Susp R/L 9YAO-21-289
21 Bolt, Strut Mtg R/L F151-28-999
22 Washer, Coil R/L F151-28-011A
23 Spring, Coil R/L FE02-28-011
Std Susp R/L F151-28-012
Sport Susp R/L F152-28-1A1A
24 Seat, Spring R/L F151-28-777
25 Bumper, Rebound R/L F151-28-776
26 Cap, Bumper R F151-28-340C
27 Bushing, Lwr Strut L F151-28-34XC
28 Mount, Strut R/L F151-28-721
29 Bracket, Mount R/L F151-28-003
30 Gasket, Mount R/L F151-28-775A
31 Bushing, Upr Strut R/L F151-28-773
32 Spacer R/L F151-28-774
33 Retainer R/L F151-28-200A
34 Arm, Front Trailing R/L F151-28-45XB
35 Link Assy, Toe Control L F151-28-4A3
36 Boot, Dust R/L F151-28-4B3
 (Included w/Toe Control Link Assy)
37 Bolt, Adjuster R/L FE01-28-66Z
38 Plate, Cam R/L FD16-28-473
39 Arm Assy, Rear Trailing R F151-28-D00B
L F151-28-D10B
40 Boot, Dust R/L F151-28-4B3
 (Included w/Rear Trailing Arm Assy)
41 Link Assy, Lateral R F151-28-500A
Front L FE03-28-500A
w/DSC R F151-28-500A
w/o DSC L F151-28-550A
R F151-28-600A
L F151-28-650A
R F151-28-503
42 Rear R/L F151-28-66Z
43 Boot, Dust (2/Side) R/L F151-28-473
 (Included w/Lateral Link Assy)
44 Bolt, Adjuster R/L F151-28-151
45 Plate, Cam R/L F152-28-151
46 Bar, Stabilizer F151-28-170
Std Suso F151-28-156A
Sport Suso F151-28-155A
47 Link, Stabilizer R/L F151-60-960A
48 Bushing, Stab L F151-60-970B
49 Brkt, Stabilizer R F151-42-117

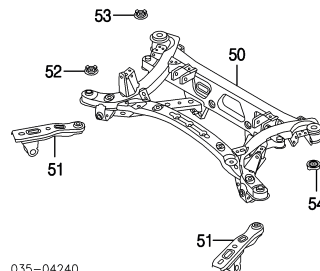

035-04240

- 50 Crossmember, Rear F151-28-80XB
51 Plate, Mounting R/L F151-28-88Z
Washer, Stopper R/L F151-28-88X
52 Front R/L F151-28-998
53 Center R/L F151-28-880
54 Rear R/L F151-28-880

REAR DRIVE AXLE

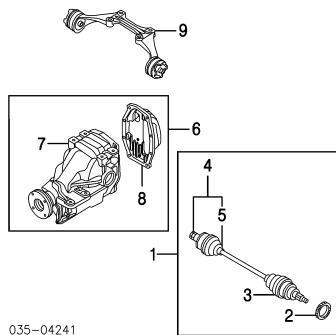


035-04241

- 1 Axle Assy, Drive Man Trans R MA02-25-50XA
Auto Trans L MA02-25-60XA
2 Rotor, Rear Sensor R MA01-25-50X
3 Boot Set, Outer L MA01-25-60X
Auto Trans R GA2G-33-471A
4 Joint Assy, Inner R/L MA02-22-530
Man Trans R/L MA01-22-530
Auto Trans
5 Boot Set, Inner (a) R/L MA02-22-520
Man Trans R/L MA01-22-520
Auto Trans R/L MA02-22-540
Man Trans R/L MA01-22-540
 (Included w/Drive Axle Assy)
6 Differential Assy (a) Included w/Inner Joint Assy
Man Trans RS04-27-100E
Auto Trans
w/LSD RS04-27-100E
w/o LSD RA14-27-100D
7 Housing, Diff RA12-27-150B
8 Cover, Diff RA12-27-320A
 (Included w/Differential Assy)
9 Mount, Differential F151-39-730A

FUEL TANK

Illustration Located in Next Column

- 1 Cap, Fuel Filler FE01-42-250A
2 Cover, Lever FE01-42-24Z
3 Pipe, Fuel Filler FE01-42-210B
4 Hose, Fuel Filler FE01-42-231
5 Protector, Fuel Filler L F157-56-1J0C
Std Susp L F157-56-1J0C
Sport Susp See Quarter Panel Section
 (Included w/Wheelhouse Liner Assy)
6 Clip, Protector (3) L BC1D-56-145
7 Tank, Fuel FE01-42-110A
8 Strap, Fuel Tank R/L F151-42-710
9 Ring, Retainer R/L F151-42-A14A
10 O-Ring, Upper R/L F151-42-A15B
11 Pipe, Fuel R F151-42-18XA
12 Pump, Fuel L N3H1-13-35ZD
13 Sender, Fuel R F151-60-960A
L F151-60-970B
14 Brkt, Fuel Sender R F151-42-117

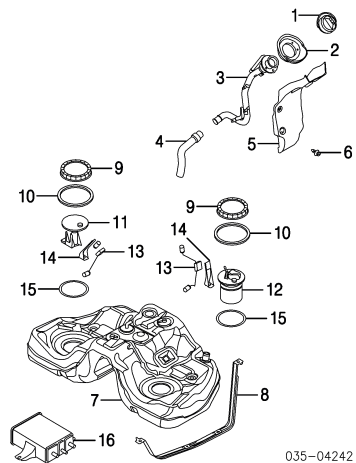


035-04242

- 15 O-Ring, Lower L F151-42-116
R/L F151-42-A61
16 Canister, Vapor-See Emission System Section

REAR BODY

SHEET METAL/EXTERIOR TRIM

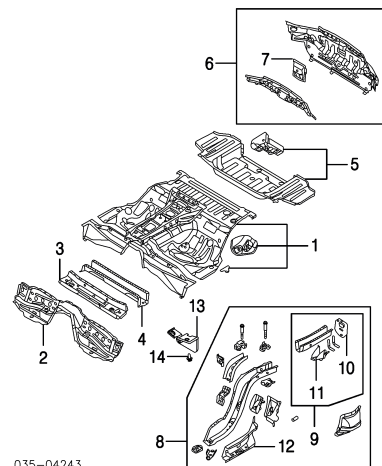

035-04243

- 1 Pan, Rear Floor F1Y1-53-710G
2 Crossmember, Front F151-53-900E
3 Crossmember, Center F151-53-920D
4 Crossmember, Rear F151-53-940B
5 Pan, Luggage Compartment F151-53-75XC
6 Panel Assy, Rear FE01-70-750C
7 Reinf, Striker F151-70-780
 (Included w/Rear Panel Assy)
8 Rail Assy, Side R F151-53-810K
L F151-54-810K
9 Rail Assy, Rear R F1Y1-53-81XC
L F1Y1-54-81XD
10 Reinf, Rail (a) R F151-53-816A
L F151-54-816A
11 Brkt, Lower Bumper (a) R F151-53-89XA
L F151-54-89XA
 (a) Included w/Rear Rail Assy
12 Sill, Rear Side R F151-53-812D
L F151-54-812D
 (Included w/Side Rail Assy)
13 Spoiler, Side R F151-51-981
L F151-51-9C1
14 Clip, Spoiler (2/Side) R/L B092-51-833

INTERIOR TRIM

Illustration Located in Next Column

- 1 Panel, Rear Trim FE01-68-89XC

madp11_g02_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

515