
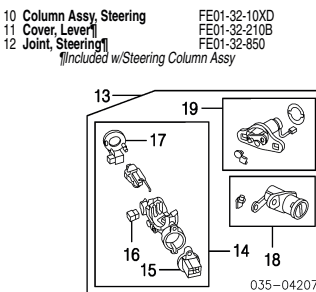



MAZDA RX-8 2004

STEERING WHEEL/COLUMN Cont'd


COLUMN TILT Cont'd

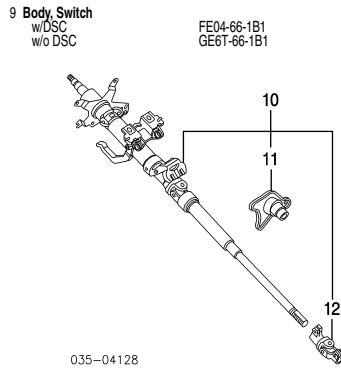


ENGINE/TRANS

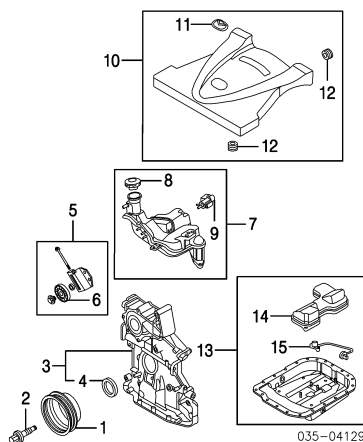


- 1 Pulley, Crankshaft N3H1-11-400C
- 2 Bolt, Crankshaft N3H1-11-406
- 3 Cover Assy, Front N3H1-10-500G
- 4 Seal, Front Cover N3A1-10-507
- 5 Pulley Assy, Idler N3H1-15-930
- 6 Pulley, Idler N3H1-15-940B
- 7 Filler Assy, Oil N3H4-10-D10D
- 8 Cap Assy, Oil Filler N3H4-10-250
- 9 Gskt, Oil Filler Cap (a) 8871-10-252
- 10 Valve, Solenoid (3) KL01-18-741
- 11 Hose, Vacuum (a) N.A.
- 12 Cover Assy, Engine N3H3-13-13XD
- 13 Emblem N323-10-2D9
- 14 Bushing, Mtg (4) N3H1-13-323A
- 15 Pan Assy, Engine Oil N3H8-10-44XB
- 16 Baffle, Oil Pan N3H1-10-40Y
- 17 Sensor, Oil Level N3H1-10-470A
- 18 Sealant, Eng Oil Pan N.A.

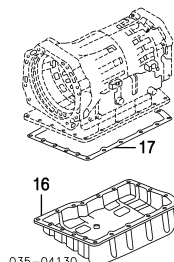

ENGINE/TRANS MOUNTS

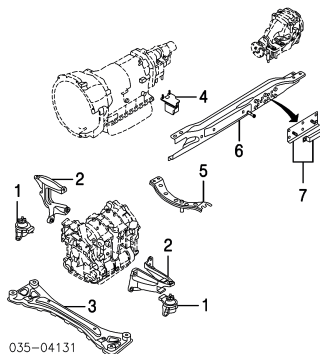








ENGINE UNDER COVER

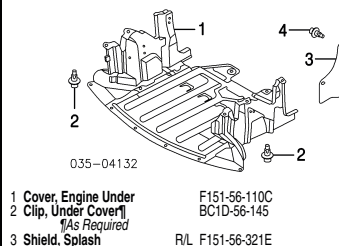

- 4 Clip, Splash Shield
*As Required
R/L BC1D-56-145

AIR CLEANER

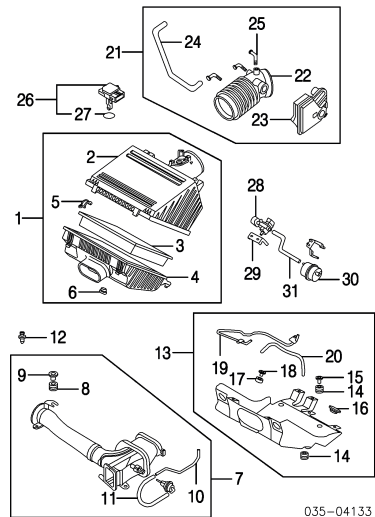


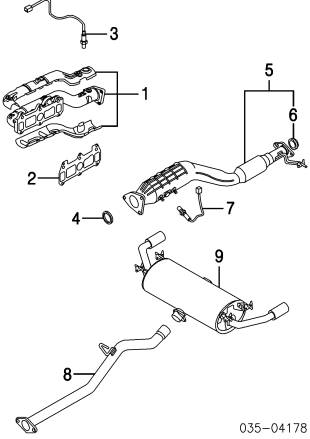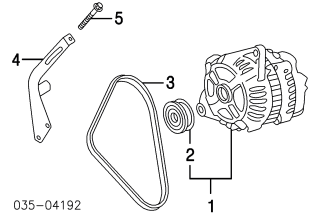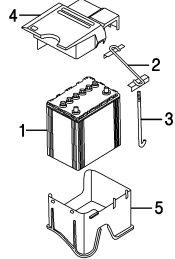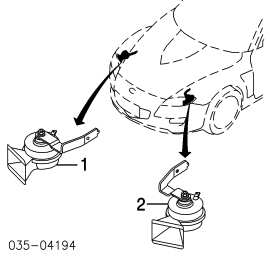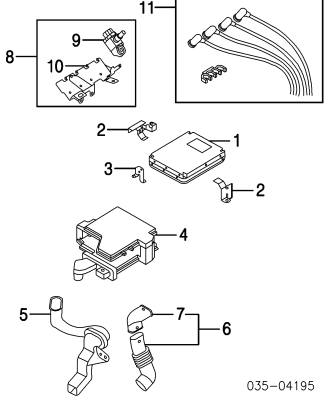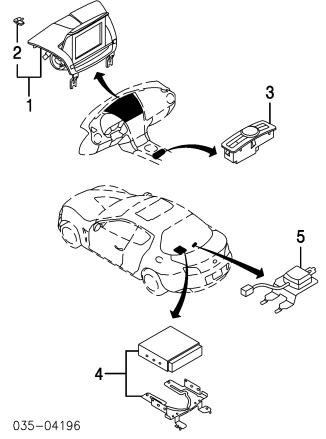EXHAUST	ELECTRICAL	IGNITION
 035-04178 - Manifold, Exhaust - Gasket, Manifold - Sensor, Front Oxygen-See Emission System Section - Gasket, Flange - Converter Assy, Catalytic - Gasket, Converter - Sensor, Rear Oxygen-See Emission System Section - Pipe, Intermediate - Muffler	ALTERNATOR  035-04192 - Alternator Assy - Pulley, Alternator - Belt, Drive-See Cooling Section - Brkt, Adjuster - Bolt, Adjuster BATTERY  035-04193 - Battery - Hold-Down, Battery - Bolt, Hold-Down (2) - Cover, Uptr Battery - Cover, Lwr Battery - Tray Assy, Battery - Brkt, Battery Tray - Duct, Air - Clip, Duct (2) HORN  035-04194 - Horn, High Note - Horn, Low Note	 035-04195 - Module, Powertrain Control - Coil Assy, Ignition - Coil, Ignition - Bracket, Coil - Wire Set, Ignition NAVIGATION SYSTEM  035-04196 - Display Assy, Navigation - Clip, Spring - Control, Navigation - Navigation Unit - Antenna, GPS STARTER Illustration Located in Next Column - Starter

MAZDA RX-8 2004


ELECTRICAL Cont'd

STARTER Cont'd

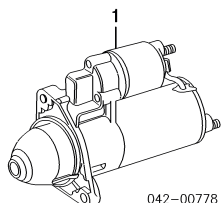

042-00778

WINDSHIELD

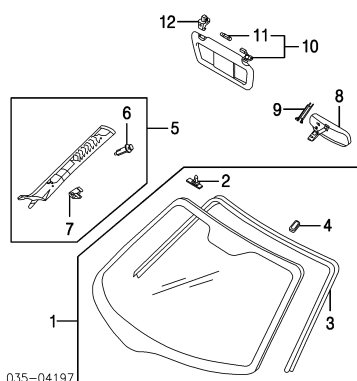


035-04197

- 1 Glass Assy, Windshield
Mazda
Man Day/Night Mirror
w/VIN Plate
w/o VIN Plate
Auto Day/Night Mirror
Auto Day/Night Mirror-Serviced w/Windshield Glass Assy
*Included w/Windshield Glass Assy
- 2 Pin, Moulding (3)
D376-63-938
- 3 Moulding, Windshield
FE15-50-601A
- 4 Mount, Mirror
BC1C-69-240
Man Day/Night Mirror
Auto Day/Night Mirror-Serviced w/Windshield Glass Assy
*Included w/Windshield Glass Assy
- Adhesive
N.A.
- 5 Garnish Assy, Windshield
R F152-68-160C-77
L F152-68-170C-77
- Clip, Trim
Type 1
Type 2 (2/Side)
- 6 Type 1
R/L GJ6A-68-162
R/L LB82-64-345
*Included w/Windshield Garnish Assy
- 7 Type 2 (2/Side)
- 8 Mirror, Rear View
Man Day/Night
Auto Day/Night
HG82-69-220A
GK2E-69-220A
- 9 Cover, Mirror
Auto Day/Night
FE01-69-225
- 10 Visor Assy, Sun
R FE01-69-270C-77
FE02-69-320B-77
- 11 Bulb, Visor
R/L N.A.
- 12 Clip, Visor
R/L LC62-69-261A-77

WIPER SYSTEM

Illustration Located in Next Column

- 1 Blade Assy, Wiper
R BE5J-67-330
L DC20-67-330
- 2 Refill, Wiper
R B16B-67-333
L H430-67-333
*Included w/Wiper Blade Assy
- 3 Arm, Wiper
R FE02-67-321
L FE01-67-321
- 4 Nut, Wiper Arm
R/L 9090-10-801
- 5 Cap, Wiper Arm
R/L G22C-67-395
- 6 Link, Wiper
w/Cold Climate Spec
w/o Cold Climate Spec
FE02-67-360
FE01-67-360
- 7 Motor, Wiper
w/Cold Climate Spec
w/o Cold Climate Spec
FE02-67-340
FE01-67-340
- 8 Arm, Wiper Link
R F151-67-361

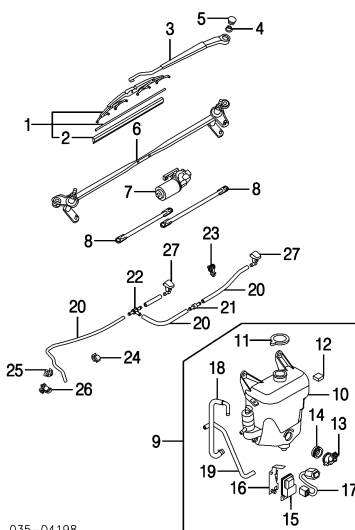


035-04198

- 9 Tank Assy, Washer
w/ H/Lamp Washers
w/o H/Lamp Washers
Std Capacity
Large Capacity
FE03-67-480B
FE01-67-480A
FE02-67-480A
- 10 Tank, Washer
w/ H/Lamp Washers
w/o H/Lamp Washers
Std Capacity
Large Capacity
FE03-67-481A
FE01-67-481A
FE02-67-481A
GJ6A-67-483A
- 11 Cap, Tank
- 12 Switch, Level
w/ H/Lamp Washers
FE03-67-488
FE01-67-482
- 13 Pump, Washer
G22C-67-491
- 14 Grommet, Pump
FE03-51-815A
- 15 Pump, H/Lamp Washer
FE03-51-213
- 16 Bracket, Pump
FE03-51-403
- 17 Harness, Pump
- 18 Pipe, H/Lamp Washer
FE01-67-501
FE02-67-501
- 19 Hose, Washer Tank
Std Capacity
Large Capacity
*Included w/Washer Tank Assy
N.A.
- 20 Hose, Washer Nozzle
*Cut to Fit
- Connector, Hose
Type 1
Type 2
E112-67-502
F152-67-502
- 21 Type 1
- 22 Type 2
- Clip, Washer Hose
Type 1 (2)
Type 2 (3)
Type 3
Type 4
F151-67-519
F152-67-519
F153-67-519
B367-18-867
- 23 Type 1 (2)
- 24 Type 2 (3)
- 25 Type 3
- 26 Type 4
- 27 Nozzle, Washer
R FE02-67-510
L FE01-67-510


COWL & DASH

Illustration Located in Next Column

- 1 Nozzle, Washer-See Windshield Section
- 2 Grille Assy, Right Cowl
FE01-50-7R0C
FE01-51-PB1B
- 3 Moulding, Cowl
- 4 Gasket, Right Cowl Grille
Type 1
Type 2
F152-50-795
F156-50-795
*Included w/Right Cowl Grille Assy
- 5 Type 1
- 6 Grille Assy, Left Cowl
FE01-50-7S0C
- 7 Moulding, Cowl
F151-50-795
- 8 Gasket, Left Cowl Grille
F151-50-795
*Included w/Left Cowl Grille Assy
- 9 Grille Assy, Center Cowl
FE01-50-7P0A
- 10 Clip, Cowl (6)
F151-51-833
- 11 Gasket, Center Cowl Grille
Type 1
Type 2
F154-50-795
FE01-50-795
*Included w/Center Cowl Grille Assy
- 12 Type 1
- 13 Cowl & Dash Assy
FE01-53-500C
- 14 Panel, Cowl
FE01-53-5A0A
- 15 Panel Assy, Upper Dash
FEY1-53-510
- 16 Plate, Upper Cowl (a)
R FE01-53-580A
L FE01-54-580A
*Included w/Cowl & Dash Assy
(a) Included w/Upper Dash Panel Assy
- 17 Panel, Lower Dash
FE01-53-400

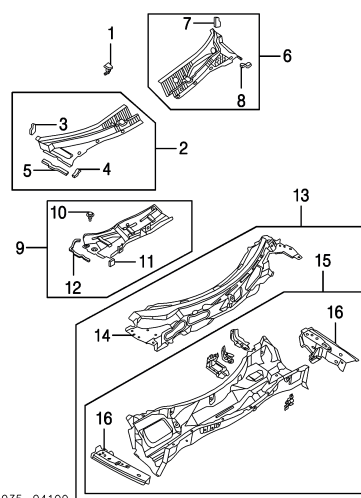


035-04199

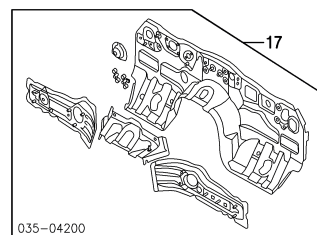

035-04200

INSTRUMENT PANEL

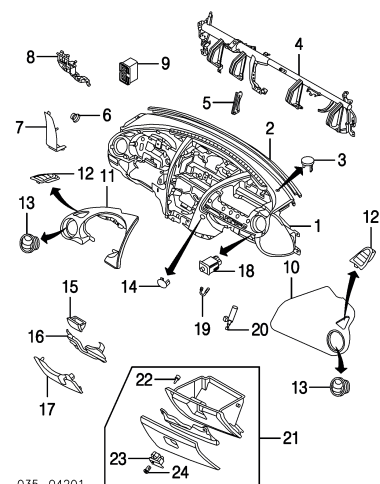

035-04201

- 1 Panel, Instrument
No. 1
No. 2
F151-55-162
F151-55-163
FE01-61-799
- 2 Seal, Inst Panel
- 3 Cover, Sensor
FE01-60-420C
- 4 Member, Inst Panel
FE01-60-453
- 5 Bracket, Member
L FE01-60-397
R FE01-64-960B-02
- 6 Cap, Inst Panel (2)
L F151-64-960B-02
L FE01-55-311
L F151-66-730
- 7 Panel, Side
- 8 Panel, Switch
- 9 Block, Fuse
L F151-66-730
- 10 Module, Passenger Air Bag-See Air Bag System Section
- 11 Pad, Inst Panel
FE01-60-350A-02

MAZDA RX-8 2004

12 Grille, Defroster R F151-60-160
L F151-60-170
13 Grille, Side Vent R/L F151-64-730
14 Cover, Hole FE01-55-723A-02
15 Box, Coin L FE01-64-18YA-02
16 Bolster, Knee L FE01-60-K90
17 Panel, Lower L FE01-64-280-02
18 Switch, Valet GK2A-66-4K0
19 Striker, Glove Box F151-64-101
20 Damper, Glove Box FE01-64-08XB
21 Box Assy, Glove FE01-64-030-02
22 Bumper, Rubber (2) LB82-64-046
23 Lock, Glove Box FE01-64-090A-02
24 Cylinder, Lock GE4T-64-09YB-00
*Included w/Glove Box Assy

035-04202

25 Cover Assy, Center
w/Navigation System*See Electrical Section
w/o Navigation System F151-55-210B
6 Speaker System F152-55-210B
9 Speaker System
*Serviced w/Navigation Display Assy B30D-64-345
26 Clip, Spring (a) (10) F151-55-531
27 Grille, Speaker (a)
9 Speaker System F151-55-531
*Included w/Center Cover Assy
28 Speaker, Dash 9 Speaker System F151-66-960
29 Display, Information F151-61-1J0
30 Grille, Center Vent F151-64-930
31 Panel Assy, Center FE01-66-9H0
32 Knob, Control (2) F152-66-BC1
33 Knob, Volume F151-66-BC1
*Included w/Center Panel Assy
34 Trim, Upper w/CD Changer F153-66-BG4
w/o CD Changer F152-66-BG4
35 Trim, Lower F151-66-BC0
36 Radio 6 Speaker System FE01-66-A50
9 Speaker System FE02-66-A50
37 Player, CD w/CD Changer TC87-79-EG0
w/o Auto Changer GK1R-66-A50
38 Control, A/C Heater FE01-61-190
Cover, Switch Hole
39 No. 1 (2) GJ6E-55-225
40 No. 2 w/o DSC GJ6E-55-225
41 Rheostat F151-66-6R0A
42 Switch, Dynamic Stability Cont GJ6E-66-4T0
43 Switch, Luggage Lid GK2A-66-630

035-04203

44 Hood, Inst Cluster FE01-55-463-02
45 Panel, Cluster FE01-55-214-02
46 Lens, Cluster
47 Center F151-55-447
48 Side R F157-55-447
L F154-55-447
49 Cluster, Instrument F151-55-471
Man Trans FE05-55-471

Auto Trans FE01-55-471

CENTER CONSOLE

035-04204

1 Console Assy, Front F151-64-320D-02
2 Panel, Side R F151-64-231A-02
L F151-64-241-02
*Included w/Front Console Assy
3 Boot, Lower Shift Man Trans F157-64-490
4 Ashtray Assy F151-64-610A-02
5 Lamp, Ashtray F151-64-61Y
*Included w/Ashtray Assy
6 Lighter Assy, Cigarette F151-66-250
7 Ring, Illumination F151-66-251
*Included w/Cigarette Lighter Assy
8 Panel Assy, Front Console Man Trans
w/Navigation System F152-64-430D-02
Cloth Seats F152-64-430C-02
Leather Seats F151-64-430D-02
w/o Navigation System F151-64-430D-02
Cloth Seats F151-64-430D-02
Leather Seats FE04-64-430C-02
Auto Trans
w/Navigation System F155-64-430D-02
Cloth Seats FE04-64-430C-02
Leather Seats F154-64-430D-02
w/o Navigation System FE02-64-430C-02
Cloth Seats S47P-64-345
9 Clip, Panel (a) (a) As Required
10 Plate, Trim F151-64-333
11 Boot, Shift Man Trans F151-64-330A
*Included w/Front Console Panel Assy
12 Indicator, Shift Auto Trans FE01-64-350A
13 Control, Navigation-See Electrical Section R GJ6E-66-420-02
L GJ6A-66-420-02
14 Switch, Seat Heater

035-04205

15 Lid Assy, Console F151-64-36YB-02
16 Latch, Console Lid F151-55-28XA
*Included w/Console Lid Assy

17 Holder Assy, Cup w/Navigation System FE05-64-39XB-02
w/o Navigation System FE01-64-39XB-02
18 Clip, Panel (a) S47P-64-345
(a) As Required
19 Bumper, Lid F151-64-47X
*Included w/Cup Holder Assy
20 Mat, Console F151-64-393B
21 Cover, Front Hole F151-55-721
22 Cover, Rear Hole F151-55-723A
23 Socket, Power GK2A-66-290

035-04206

24 Box, Rear Console w/Navigation System F152-64-440A-02
w/o Navigation System F151-64-440B-02
25 Mat, Box w/Navigation System F152-64-449A
w/o Navigation System F151-64-449A
26 Lid Assy, Box F151-64-460-02
27 Latch, Lid F151-64-453
*Included w/Box Lid Assy
28 Box Assy, Storage F151-64-50XA-02
29 Lock, Storage Box F151-64-451A
30 Cylinder, Lock GE4T-64-09YB-00
*Included w/Storage Box Assy
31 Frame Assy, Back F151-64-510
32 Cushion, Console Box (3) LB82-64-046
*Included w/Back Frame Assy
33 Panel, Side Console R F151-64-421
L F152-64-421
34 Clip, Panel R/L S47P-64-345
*As Required

ROCKER/PILLARS/FLOOR

SHEET METAL

035-04208

1 Panel, Outer Side Sill R F1Y1-70-270
L F1Y1-71-270
2 Pillar, Outer Hinge R F1Y1-70-220A
L F1Y1-71-220
3 Panel, Inner Side Sill R F1Y1-70-27XA
L F1Y1-71-27X
4 Reinf, Hinge Pillar R F1Y1-70-030A
L F1Y1-71-030
5 Bracket, Pillar R F151-70-21Y
L F151-71-21Y
6 Gusset, Sill R F151-70-135
L F151-71-135
7 Pillar, Inner Hinge R F1Y1-70-240
L F1Y1-71-240
8 Reinf, Up Pillar R F151-70-24Z
L F151-71-24Z
9 Brkt, Front Assist Handle R FE01-70-192
10 Brkt, Inst Panel FE01-71-26XA
11 Brkt, Inner Pillar R FE01-70-260
L FE01-71-260
12 Brkt, Fender R F151-70-071D
L F151-71-071D

madp11_g02_

Procedure Explanation Pages Must Be Used with the Above Text for an Accurate Damage Report.
Comments or suggestions? Need assistance? Call 1-800-854-7030 or 858-578-6550. Ext. 8220. Fax 1-888-256-7969 or 858-549-0629.

509